

### PUSHBUTTON PENDANT STATIONS

MODEL NUMBER	DESCRIPTION
PT-S02A	Single Row 2 Button - All 1-Speed
PT-S02B	Single Row 2 Button - All 2-Speed
PT-S03AE	Single Row 3 Button - All 1-Speed w/Emergency Stop
PT-S03BE	Single Row 3 Button - All 2-Speed w/Emergency Stop
PT-S04A	Single Row 4 Button - All 1-Speed
PT-S04B	Single Row 4 Button - All 2-Speed
PT-S04AE	Single Row 4 Button - All 1-Speed w/Emergency Stop
PT-S04BE	Single Row 4 Button - All 2-Speed w/Emergency Stop
PG-S5A	Single Row 5 Button - All 1-Speed w/Emergency Stop
PG-S5B	Single Row 5 Button - All 2-Speed w/Emergency Stop
PT-S06A	Single Row 6 Button - All 1-Speed
PT-S06B	Single Row 6 Button - All 2-Speed
PT-S06AE	Single Row 6 Button - All 1-Speed w/Emergency Stop
PG-S7A	Single Row 7 Button - All 1-Speed w/Emergency Stop
PG-S7B	Single Row 7 Button - All 2-Speed w/Emergency Stop
PG-S8A	Single Row 8 Button - All 1-Speed
PG-S8B	Single Row 8 Button - All 2-Speed
PG-S8AE	Single Row 8 Button - All 1-Speed w/Emergency Stop
PT-S08BE	Single Row 8 Button - All 2-Speed w/Emergency Stop
PG-S10A	Single Row 10 Button - All 1-Speed
PG-S10AE	Single Row 10 Button - All 1-Speed w/Emergency Stop
PG-S10BE	Single Row 10 Button - All 2-Speed w/Emergency Stop



### PENDANT ACCESSORIES

PART NUMBER	DESCRIPTION
HC80325100	Interlock
HC80830500	E-Stop Nameplate
HC80323101	Red E-Stop
HC80323100	Black E-Stop
07401015	Cord Connector - .37 - .50 W/ MESH
07401017	Cord Connector - .50 - .62 W/ MESH
07401018	Cord Connector - .62 - .75 W/ MESH
07401019	Cord Connector - .50 - .62 W/ MESH
07401021	Cord Connector - .62 - .75 W/ MESH
07401023	Cord Connector - .75 - .87 W/ MESH
07401025	Cord Connector - .87 - 1.0 W/ MESH

**Please consult factory for additional Pendants, Options and Accessories not listed.**