


## Assembly Instructions 2700S Inspection Stand

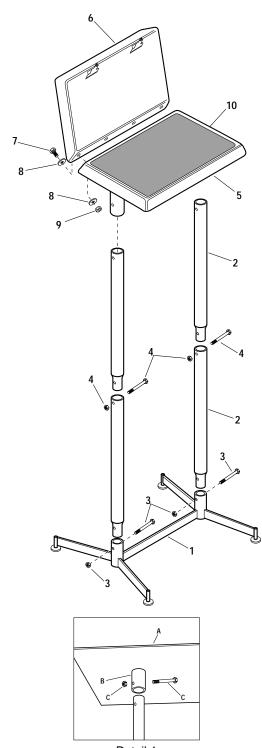

-Detail 1-Assembling writing surface to post.



P.O. Box 26 • 600 South Clark St. Mayville, WI 53050 Phone: 920-387-4120 Fax: 920-387-4189

**NOTE:** This stand may be assembled with writing surface (item 5) at a height suitable for either standing use or seated use. To assemble for seated use, substitute 11" long post section for 22 1/2" long section (item 2).

Refer to illustration at left. *NOTE: The unit you are assembling may look slightly different than the illustration.* 

- 1. Identify posts for stand (items 2).
- 2. Snap glides into base (1).
- 3. Slide ends of lower posts (2) onto base (1). Secure with screws and nuts (3). Slide upper posts into tops of lower posts. Secure with screws and nuts (4). Tighten.
- 4. Slide inspection panel (5) onto top of stand posts (detail 1). Secure with screws and nuts (C on detail 1). Tighten.
- 5. Assemble display panel (6) to inspection panel (5) using four bolts, flat washers and hex nuts (7, 8, 9). Tighten securely.
- 6. Install neoprene pad (10) on inspection panel.